

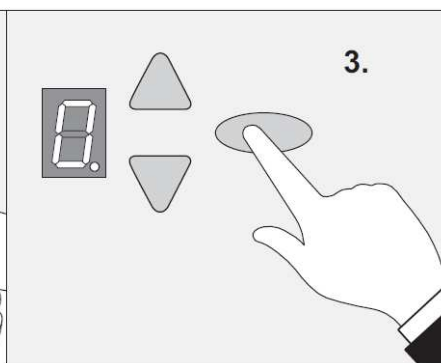
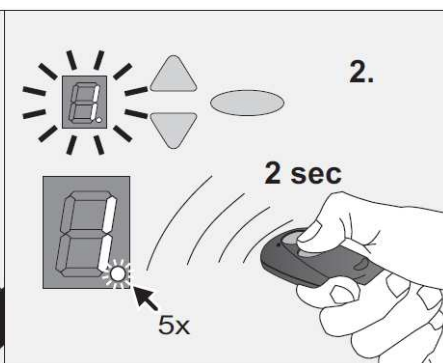
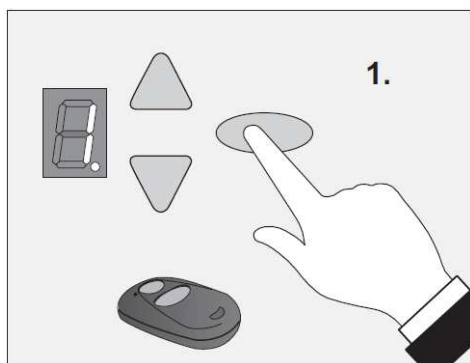
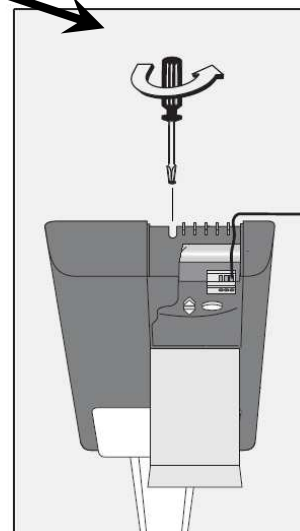


Télécommande - Handsender - Transmitter - Emisor - Handzender  
 - Emittente - Controlo remoto portátil - Handsändare - Håndsender  
 - Käsikäyttö - Pilot - Kézi adó - Telecomandă :  
**PP600 – PP601/602**

**TX43-2**

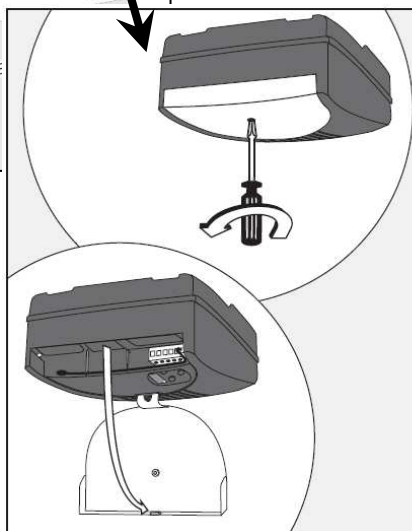

- |                            |                       |
|----------------------------|-----------------------|
| D Batteriewechsel          | SL Zamenjava baterij  |
| GB Changing the battery    | DN Batteriskift       |
| F Changement des piles     | N batteriskifte       |
| NL Vervangen van de accu   | S Batteribyte         |
| E Cambio de la pila        | FI Patterinvaihtol    |
| I Cambio della batteria    | LIT Baterijø keitimas |
| PL wymiana baterii         | RU Ни́яиá ääóäóääë    |
| PT Substituição das pilhas | TR Pii deöiptirme     |
| CZ Výmni na baterie        | HU Elemcsere          |
| EL Άεέääáπ i ö áóáñφ í     | HR Zamjena baterijal  |

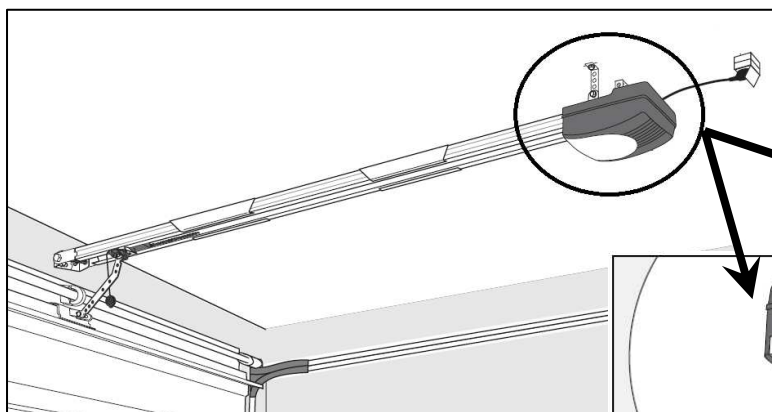